

AW1230,AW1236,AW1242

ASSEMBLY INSTUCTIONS

Getting started:

prepare a protection layer, a screwdriver


STEP 1: Joint top&bottom panel with side panel

STEP 2: Attach left side panel

STEP 3: Attach the frame


STEP 4: Hinge the door to the face frame and adjustt the cover-space

STEP 5: Put on the adjustable shelves

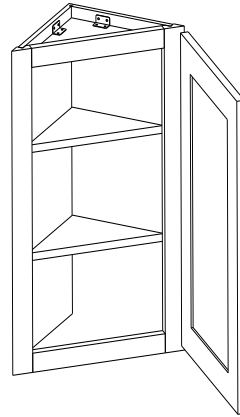


STEP:1


PARTS LIST		
NO.	Description	QTY
A	RIGHT SIDE PANEL	1
B	TOP&BOTTOM PANEL	2
C	LEFT SIDE PANEL	1
D	FACE FRAME	1
E	CABINETS DOOR	1
F	ADJUSTABLE SHELF	2 OR 3

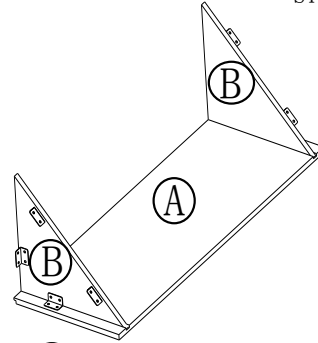


STEP:4

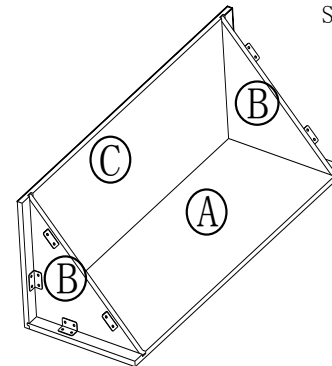


STEP:2

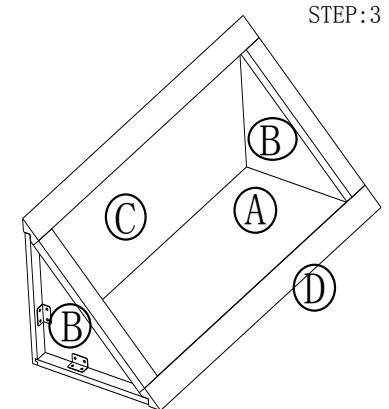




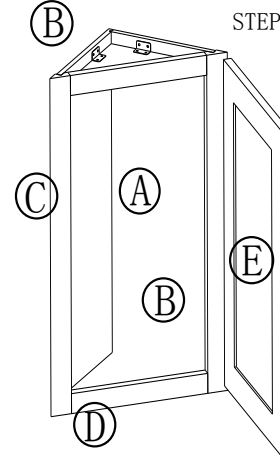


STEP:3

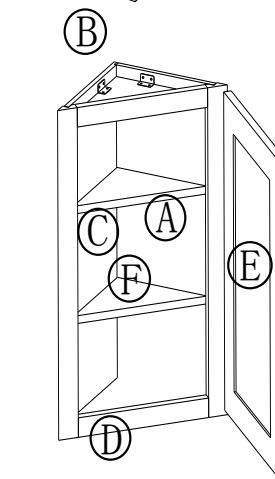

STEP:4



STEP:5

6	1 1/2" SOFTCLOSE HINGE	2	 1 1/2" hinge
5	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
4	BUMPER	2	 Bumper
3	SHELF CLIP	8 OR 12	 Shelf clip
2	9/16"ROUND HEAD SCREW	32	 9/16" round head screw
1	CLEAT	8	 Cleat
NO.	Description	QTY	PICTURE
HARDWARE LIST			