







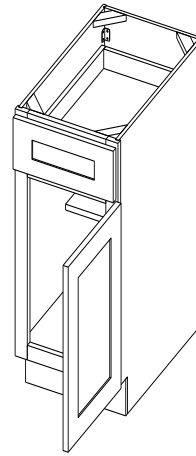





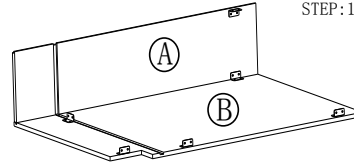
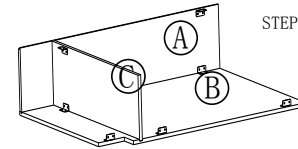
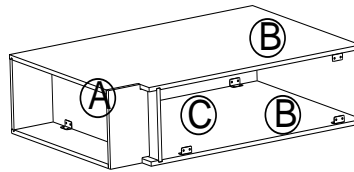
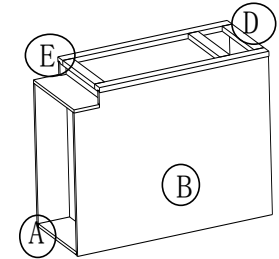
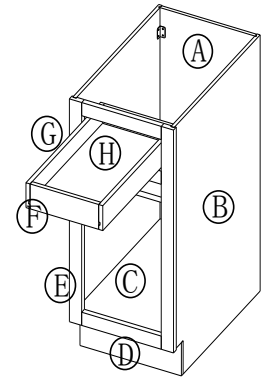
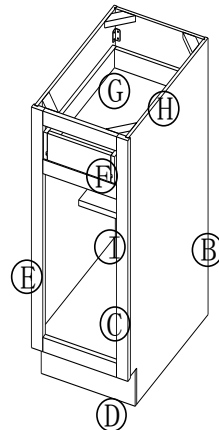
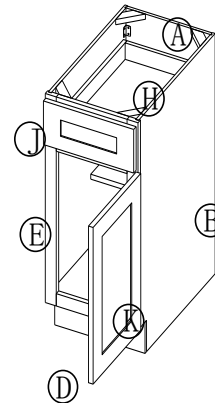
B12,B15,B18,B21**ASSEMBLY INSTRUCTIONS****Getting started:**

prepare a protection layer, a screwdriver


STEP 1: Joint side panel with back panel**STEP 2:** Joint bottom panel with side panel**STEP 3:** Joint side panel with bottom & back panel**STEP 4:** Attach frame on and toekick board**STEP 5:** Joint the drawer together, then install the drawer guide.**STEP 6:** Attach the block on the top corner, and put on the adjustable shelf**STEP 7:** Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINETS DOOR	1

11	1 1/2" SOFTCLOSE HINGE	2	
10	3/4" ROUND HEAD SCREW	2	
9	BUMPER	6	
8	1" ROUND HEAD SCREW	4	
7	Selfclose slider	1	
6	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW	40	
4	CLEAT	10	
3	1" FLAT HEAD SCREW FOR CARCASS	2	
2	BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	
NO.	Description	QTY	PICTURE

HARDWARE LIST**STEP:1****STEP:2****STEP:3****STEP:4****STEP:5****STEP:6****STEP:7**

Full extension concealed drawer runners

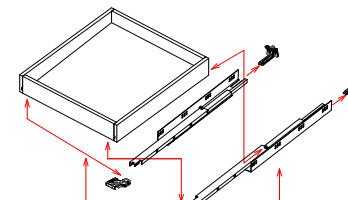

Drawer box
Locking devices
Runner profiles
Rear mounting brackets(for frame applications)

