







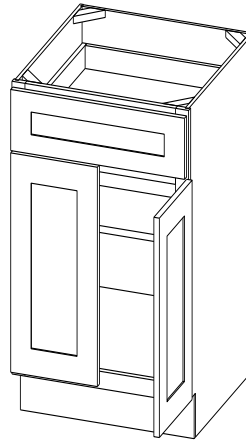





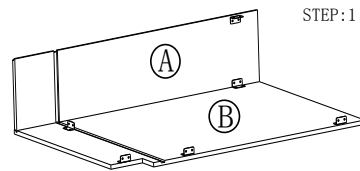
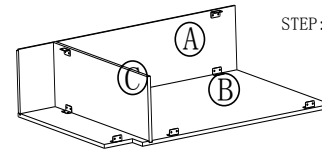
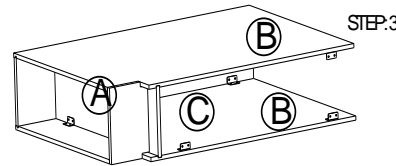
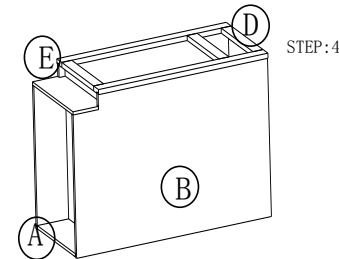
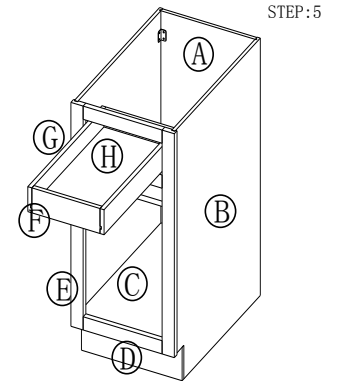
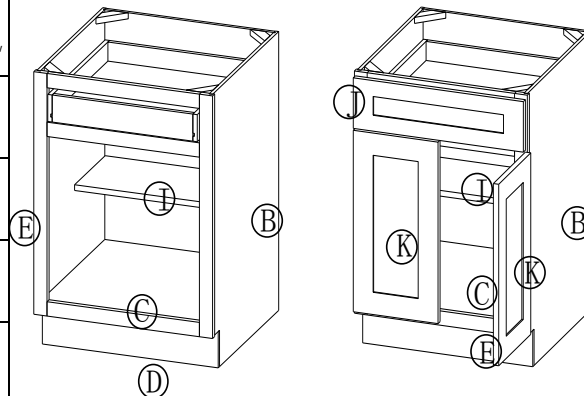
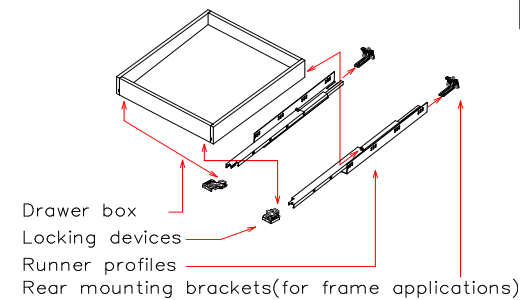
B24,B27,B30**ASSEMBLY INSTRUCTIONS****Getting started:**

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel**STEP 2:** Joint bottom panel with side panel**STEP 3:** Joint side panel with bottom & back panel**STEP 4:** Attach frame on and toekick board**STEP 5:** Joint the drawer together, then install the drawer guide.**STEP 6:** Attach the block on the top corner, and put on the adjustable shelf**STEP 7:** Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINETS DOOR	2

11	1 1/2" SOFTCLOSE HINGE	4	
10	3/4" ROUND HEAD SCREW	4	
9	BUMPER	8	
8	1" ROUND HEAD SCREW	4	
7	Selfclose slider	1	
6	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW	44	
4	CLEAT	11	
3	1" FLAT HEAD SCREW FOR CARCASS	3	
2	BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	
NO.	Description	QTY	PICTURE

HARDWARE LIST**STEP:1****STEP:2****STEP:3****STEP:4****STEP:5****Full extension concealed drawer runners**

Drawer box
 Locking devices
 Runner profiles
 Rear mounting brackets(for frame applications)

