

# LSB33,LSB36

## ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint right side panel with right back panel

STEP 2: Fix the bottom panel on

STEP 3: Joint right side panel with right back panel

STEP 4: Attach toe-kick on

STEP 5: turn the carcass stand


STEP 6: Attach face frame(long and short), then screw up

STEP 7: Attach top panel using screw

STEP 8: Insert back panel through the groove

STEP 9: Install the block corner

STEP 10: Hinge the door onto the face frame and adjust the cover-space

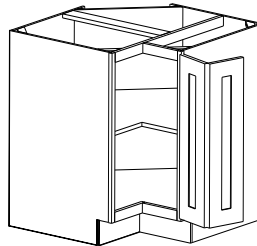

| PARTS LIST |                  |     |
|------------|------------------|-----|
| NO.        | Description      | QTY |
| A          | SIDE PANEL       | 2   |
| B          | BACK PANEL       | 2   |
| C          | TOP&BOTTOM PANEL | 1   |
| D          | TOE KICK         | 1   |
| E          | TOE KICK         | 1   |
| F          | FACE FRAME       | 1   |
| G          | FACE FRAME       | 1   |
| H          | CONNECT STRIP    | 1   |
| I          | BACK PANEL       | 1   |
| J          | ADJUSTABLE SHELF | 1   |
| K          | CABINETS DOOR    | 2   |

| 11  | 135 DEGREE HINGE                  | 2   |         |
|-----|-----------------------------------|-----|---------|
| 10  | 3/4" ROUND HEAD SCREW             | 8   |         |
| 9   | BUMPER                            | 4   |         |
| 8   | 165 DEGREE HINGE                  | 2   |         |
| 7   | SHELF CLIP                        | 6   |         |
| 6   | 9/16" ROUND HEAD SCREW            | 72  |         |
| 5   | DOWEL                             | 6   |         |
| 4   | 1" FLAT HEAD SCREW FOR CARCASS    | 11  |         |
| 3   | CLEAT                             | 18  |         |
| 2   | BLOCK                             | 4   |         |
| 1   | 1" FLAT HEAD SCREW FOR WOOD BLOCK | 8   |         |
| NO. | Description                       | QTY | PICTURE |

## HARDWARE LIST

