

MO3030,MO3036,MO3042

ASSEMBLY INSTUCTIONS

Getting started:

prepare a protection layer, a screwdriver


STEP 1: Joint top panel with back panel

STEP 2: Joint side panel with back panel


STEP 3: Joint bottom panel and middle panel with side panel

STEP 4: Attach frame on


STEP 5: Fix door onto the frame and adjust the cover-space

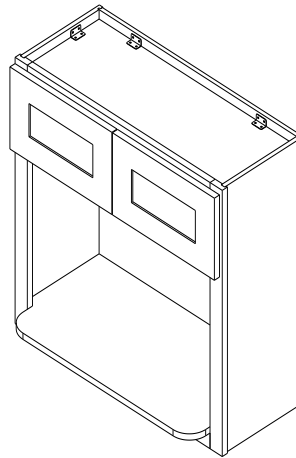


PARTS LIST		
NO.	Description	QTY
A	TOP&BOTTOM PANEL	2
B	BACK PANEL	1
C	SIDE PANEL	2
D	BOTTOM PANEL	2
E	FACE FRAME	1
F	CABINETS DOOR	2

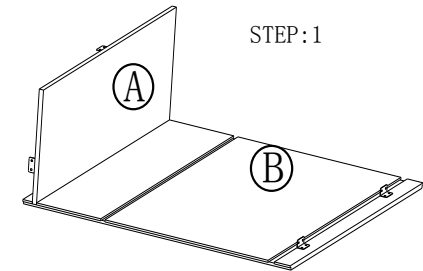


STEP:1

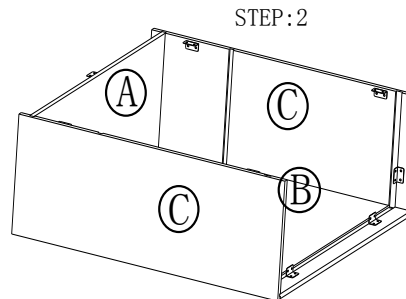


STEP:2

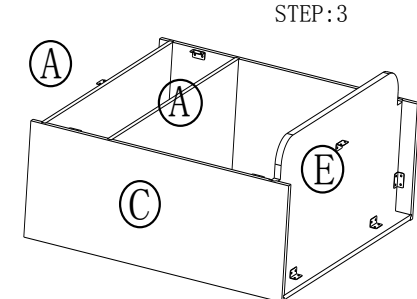




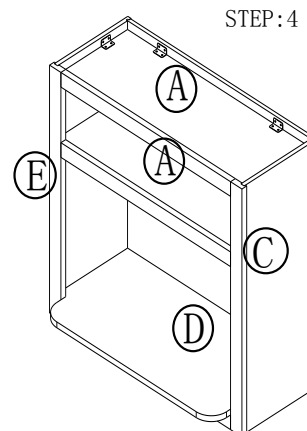


STEP:3

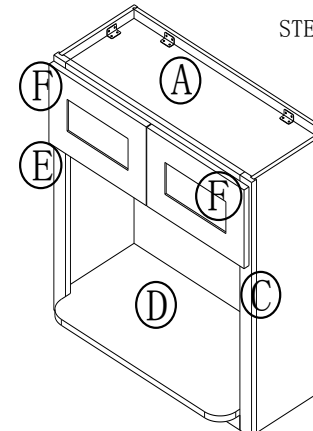

STEP:4



STEP:5

6	1 1/2" SOFTCLOSE HINGE	4	 1 1/2" hinge
5	3/4" ROUND HEAD SCREW	4	 3/4" round head screw
4	BUMPER	4	 Bumper
3	9/16"ROUND HEAD SCREW	76	 9/16" round head screw
2	CLEAT	19	 Cleat
1	1"FLAT HEAD SCREW FOR CARCASS	12	 1" flat head screw
NO.	Description	QTY	PICTURE

HARDWARE LIST